

## MVE2xx – globe valves actuators

### MODULATING / 3-POINT CONTROL



The appearance of the product may differ from the illustration. Technical specifications are subject to change.

## MVE2xx SERIES

Model	Force [N]	Power supply	Description
MVE206	600	230 V <sub>AC</sub> ±10%	long yoke, modulating/3-point control
MVE210	1000	230 V <sub>AC</sub> ±10%	long yoke, modulating/3-point control
MVE215	1500	230 V <sub>AC</sub> ±10%	long yoke, modulating/3-point control
MVE222	2200	230 V <sub>AC</sub> ±10%	long yoke, modulating/3-point control
MVE206S	600	230 V <sub>AC</sub> ±10%	short yoke, modulating/3-point control
MVE210S	1000	230V <sub>AC</sub> ±10%	short yoke, modulating/3-point control
MVE215S	1500	230V <sub>AC</sub> ±10%	short yoke, modulating/3-point control
MVE222S	2200	230V <sub>AC</sub> ±10%	short yoke, modulating/3-point control

### APPLICATION AND USE

The New MVE is a flexible electro-mechanical actuator for the control of two and three way globe valves in:

- heating and cooling systems,
- air handling units,
- district heating plants,
- industrial temperature control systems.

MVE can be controlled either by a proportional (modulating) signal or by an increase/decrease (3-point/floating) signal.

It is easy to mount and connect the actuator. Direct mounting is possible to any CONTROLLI flanged valve. Linkage kits are available for CONTROLLI threaded valves as well as for valves of other manufacturers (table p. 3).

The actuator has a fine resolution (500 steps on the full stroke range) for exacting fluid control and it is able to self-calibrate on a different stroke without the need of any user action (this function is DIP switch selectable on the field).

MVE has intelligent behaviour and alarm functionality in case of unexpected operation, feedback of alarms to the user is provided by LEDs (GREEN and RED) on the control board.

**Note:** Do not use the actuator if not coupled with its relating valve.

## MVE2xx – globe valves actuators

### MODULATING / 3-POINT CONTROL

#### OPERATIONS

The actuator translates the control signal (modulating or 3-point floating) from the controller into a valve position. A modern brushless DC motor in the actuator drive a gear train and a worm gear – screw jack mechanism convert the motor revolutions into accurate and repeatable linear movements.

#### Controls signal

MVE actuator can be controlled by one of 2 main control types:

- 3-point floating ;
- Modulating (or proportional) signal with filed selectable range (e.g., 0-10 V<sub>DC</sub>, 2-10 V<sub>DC</sub>, 0-5/2-6 V<sub>DC</sub>, 5-10/6-10 V<sub>DC</sub> and 4-20 mA).

#### Manual override

There is a manual operation handle on the actuator. When it is lowered (manual override ON), the power supply to the motor power stage circuitry is cut off and the motor stops. The actuator can be operated manually and the valve positioned accordingly. The manual override lever stays in position until it is raised again, then board and motor will be powered again. At the end of this operation the actuator moves to initial position (on the basis of DIP no. 1 setting) then it follows the control signal. When the manual override is engaged the GREEN and the RED LED are ON.

Manual operation handle can also be used to modify any DIP switch setting or as re-set function after any alarm occurrence. The actuator is supplied with the manual override lowered (ON).

It is not necessary to remove power supply to modify DIP switches setting.

But, in this case, take care of 230V<sub>AC</sub> voltage.

#### Position Feedback

The actuator utilizes a 2-10V position feedback (look at DIP n. 1 setting).

#### Calibration


The actuator has both auto and manual stroke calibration, DIP no. 7. In factory delivery the auto stroke calibration is enabled – manual calibration is not necessary unless maintenance is required on the valve or certain alarm functions are desired.

#### End point auxiliary switches (with optional DMVE contacts)

End point switches change over when the valve is fully open or closed. They are voltage free contacts with 24V AC/DC, 4A max voltage on terminals.

End point switches can be utilized to indicate valve stroke end positions and for relay control of additional plant equipment. When the actuators are controlled individually or in sequence, it is possible to use the end switches to toggle when the valve is fully open or fully closed. The auxiliary switch position according to control signal (Y) is shown in the table below.

Control signal (Y)	Relay KC1	Relay KC2
0÷ 0.5 V <sub>DC</sub>	KC1 to K1	KC2 to K3
0.5÷ 9.5 V <sub>DC</sub>	KC1 to K2	KC2 to K3
9.5÷ 10 V <sub>DC</sub>	KC1 to K2	KC2 to K4

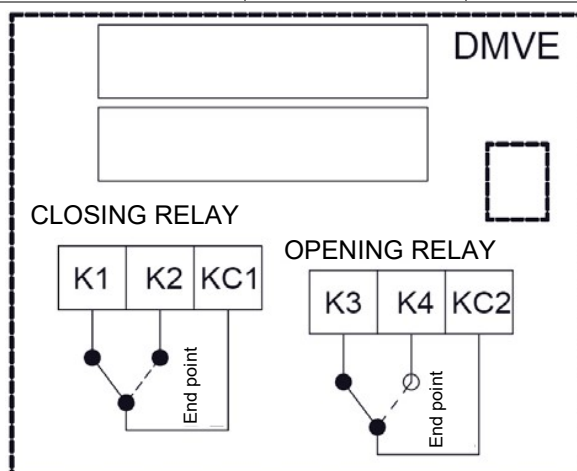

#### Diagnostic

The actuator is provided with a self diagnostic algorithm able to detect faulty conditions:


- stroke calibration out of range 5-60 mm;
- unexpected stall condition (e.g. valve stuck or extra stroke due to actuator link loose);
- voltage supply out of range.

These faulty conditions are signaled through the GREEN and RED LED on the electronic board blinking accordingly (see Diagnostic – Alarm Function Table).

## MVE2xx – globe valves actuators


### MODULATING / 3-POINT CONTROL

#### TECHNICAL SPECIFICATION


	MVE206 MVE206S	MVE210 MVE210S	MVE215 MVE215S	MVE222 MVE222S
Supply voltage F N	230 V <sub>AC</sub> ±10%, 50-60 Hz			
Power consumption (running)	13 VA / 6 W	18 VA / 8 W	21 VA / 11 W	25 VA/10 W
Power consumption (holding)	11 VA / 5 W	11 VA / 5 W	13 VA / 7 W	10 VA/4 W
Czas ruchu				
Modulating 5-15 mm	15 s			60 s
Modulating 15-25 mm	20 s			
Modulating 25-60 mm	30 s			
Increase/decrease	60 s			
Skok [mm]	5-60 mm (limited to 30 mm for MVE.S)			
Force [N]	600	1000	1500	2200
Duty cycle	max 50%/60 minutes			
Analogue input Y M	voltage 0-10V - impedance > 100kΩ (range: 0-10V <sub>DC</sub> , 2-10V <sub>DC</sub> , 0-5/2-6V <sub>DC</sub> , 5-10/6-10V <sub>DC</sub> ) 500 Ω (range 4-20mA)			
Digital inputs Y1 Y2	connection of Y1, Y2 to M			
Output V+	voltage 16 V <sub>DC</sub> ± 0.5 V			
	max load 25 mA			
Output U	voltage 2-10Vdc (0-100%)			
	max load 2 mA			
Room temperature	operation -10T50°C; storage -20T50°C			
Room humidity	max 90% r.h.			
Protection degree	IP54 (with PG13.5 cable gland - not supplied)			
Isolation class				
Standard	Emission/Immunity EMC 2004/108/CE according to EN 61326-1:2006 standard LVD 2006/95/CE according to EN61010-1 standard			
Materials	housing: aluminum - cover: ABS			
Color	aluminum / white			
Weight [kg]	1.7 (MVE2xx); 1.6 (MVE2xxS)			
Dimensions [mm]	See picture on the page 7.			

#### INSTALLATION:

The actuator can be mounted with any orientation but never up-side down. When the fluid temperature exceed 120°C the actuator shall be mounted leaning 45°.

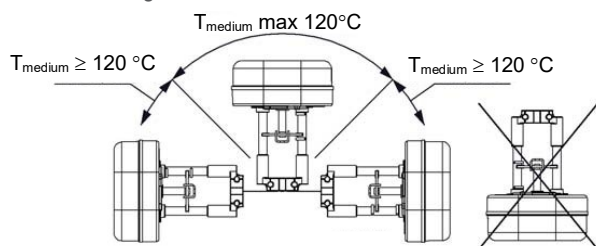

To mount the actuator on to a valve, position the valve stem to the bottom of its travel, slide the actuator onto the valve neck, adjusting with the manual override the screw jack position so the square nut on the valve spindle fits into the groove on the cross bar. Then slide the brace into the groove on the valve neck and secure the nuts.

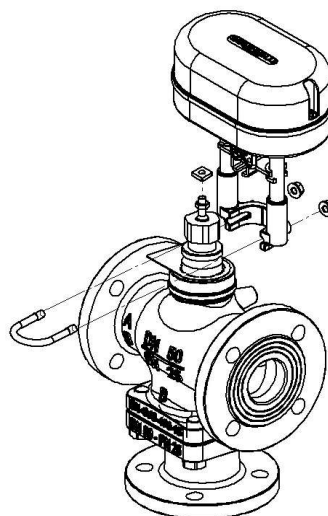

See mounting instructions for full details (MVE2xx\_DIM205).

## MVE2xx – globe valves actuators


### MODULATING / 3-POINT CONTROL

#### MAINTENANCE


The actuator is maintenance-free.

#### ACCESSORIES

DMVE	End point auxiliary switches
248	Yoke heater 24V, 50W (suggested when the fluid temperature is below 0°C)
GMVE	Thermal insulation for MVE actuators
GMVE.S	Thermal insulation for MVE.S actuators

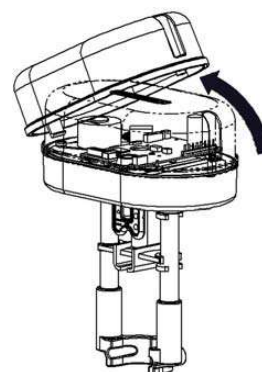

Use PG13.5 cable gland (not supplied).

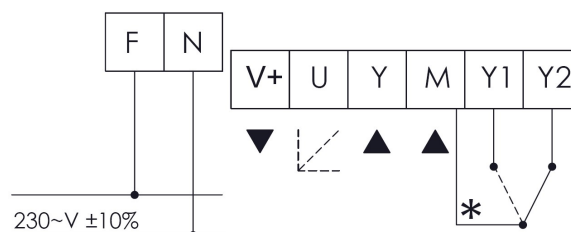

(\*) In order to use the floating control the only possible connection is between terminal M and Y1/Y2. Do not connect Y1/Y2 to phase (F) or neutral (N).

Assembly kit	MVE	MVES
Current Controlli valves (except for 2TGB.F/3TGB.F PN16)	(not required)	/
2TGB.F/3TGB.F PN16	/	(not required)
Zawory Controlli z przyłączem gwintowanym M40 (except for VSB/VMB/VSBF/VMBF PN16)	AG51	/
VSB/VMB/ VSBF/VMBF PN16	AG52	AG63
Other manufacturers		
Landis *	AG70-10 AG70-14	/
Danfoss (VR/VF (S) models)	AG60-07	/
TAC DN15-V298	AG 60-08	/
TAC DN15-V2XX/V3XX	AG 60-09	/
Honeywell**	AG 60-10	/
Airtek	AG 60-11/ AG60-12	/
Johnson Controls code VB7816-2111	AG 66	/
Johnson Controls code BM-3018-3300	AG 67	/
Tac Venta	(not required)	/

(/) this model can not be assembled

(\*) AG70-10 for valves having stem Ø 10mm  
AG70-14 for valves having stem Ø 14mm

(\*\*) valid for the following models: M6: V176A. B, V538C 1/4": V5011A

#### ELECTRIC CONNECTIONS

Remove the cover screw with a screwdriver and then remove the cover as shown in the picture beside.

MVE is equipped with a 6 poles removable terminal block for actuator control and with a not removable 2 poles terminal (F and N) for main control; the each pole of the plug is clearly marked and the same label are reported on the electronic board.

Before powering up the actuator make sure the plug is properly connected to the board and the labels on the plugs and on the board match.

Designation	Description	Function	Wire size	Max wire length
F	230 V <sub>AC</sub>	Power supply	AWG16 (min. 1 mm <sup>2</sup> - max. 1.5 mm <sup>2</sup> )	75 m
N				
Y	0...10 V <sub>DC</sub>	Modulating control input	AWG20 (min. 0.5 mm <sup>2</sup> - max. 1.5 mm <sup>2</sup> )	200 m
M	0 V (common)			
Y1	Open	Floating (3-point) control input	AWG20 (min. 0.5 mm <sup>2</sup> - max. 1.5 mm <sup>2</sup> )	200 m
Y2	Close			
V+	16 V <sub>DC</sub>	Voltage output (max 25mA)	AWG20 (min. 0.5 mm <sup>2</sup> - max. 1.5 mm <sup>2</sup> )	200 m
M	0 V (common)			
U	2...10 V <sub>DC</sub>	Feedback signal output	AWG20 (min. 0.5 mm <sup>2</sup> - max. 1.5 mm <sup>2</sup> )	200 m
M	0 V (common)			


Note: To avoid damages to electronic components caused by the PCB bending, do not press too much while fixing the terminal block.

#### GROUND CONNECTIONS

Connect the ground terminal to the proper screw labelled with the ground symbol as shown in the picture here below.

## MVE2xx – globe valves actuators

### MODULATING / 3-POINT CONTROL

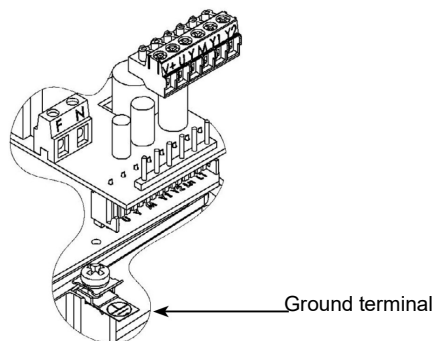


#### SAFETY NOTES

##### 230 V products


- Install on the power supply line a protecting device to avoid short circuits (fuse or magneto-thermic) according to the specifications in force;
- in case of accidental removal of the cover to make sure that power is disconnected before working on the actuator or near it;
- the products are maintenance free.

#### WIRING DIAGRAMS

##### 3-point control

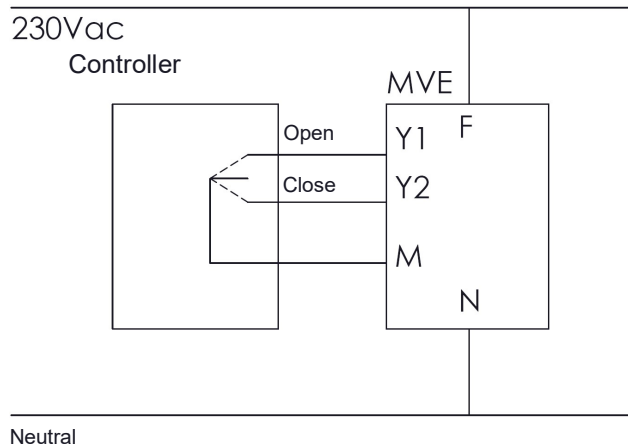

##### Modulating control (0-10V<sub>CC</sub>)

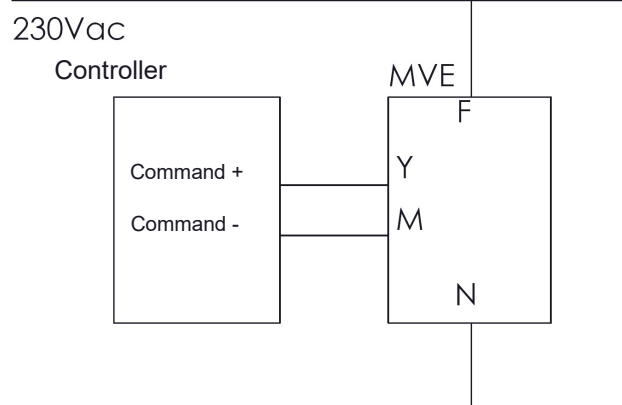

Neutral


#### DIP SWITCHES SETTINGS

Set the DIP switches according to the tables below. Power down and power up again the actuator or act on the manual override to be sure that settings will be recognized.

##### Factory settings





DIR	<input type="checkbox"/>	REV
MOD	<input type="checkbox"/>	INC
---	<input type="checkbox"/>	SEQ
0 - 10	<input type="checkbox"/>	2 - 10
0 - 5, 2 - 6	<input type="checkbox"/>	5 - 10, 6 - 10
---	<input type="checkbox"/>	4 - 20 mA
AUTO	<input type="checkbox"/>	MAN

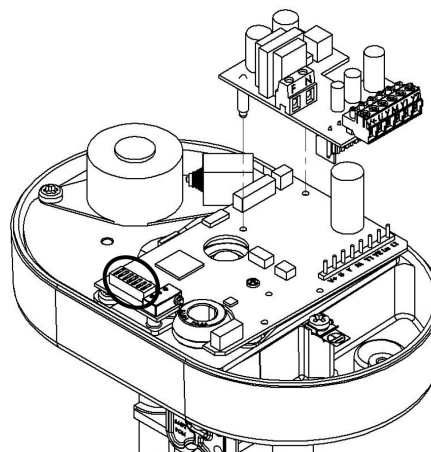OFF ON



## MVE2xx – globe valves actuators
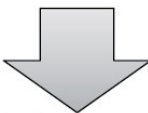
### MODULATING / 3-POINT CONTROL

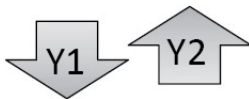DIP switch	OFF	ON
1	<p>Direct action</p>  <p>U = 2 V</p> <p>U = feedback</p> <p>U = 10 V</p>	<p>Reverse action</p>  <p>U = 10 V</p> <p>U = feedback</p> <p>U = 2 V</p>
2	<p>Modulating Control (MOD) (Input between Y [+] and M [-])</p> 	<p>3 point floating (INC) ( Y1 open-extend , Y2 close-retract connected to M)</p> 
3	–	Selection of sequence mode, control range defined by DIP n. 5
4	Modulating Control 0-10Vdc (DIP n. 2 OFF only)	Modulating Control 2-10Vdc (DIP n. 2 OFF only)
5	Sequence Control 0-5 V <sub>DC</sub> with DIP no. 4 OFF only. Sequence Control 2-6V <sub>DC</sub> with DIP no. 4 ON only (with DIP no. 3 ON only).	Sequence Control 5-10 V <sub>DC</sub> with DIP no. 4 OFF only. Sequence Control 6-10V <sub>DC</sub> with DIP no. 4 ON only (with DIP no. 3 ON only).
6	Voltage Input Signal Vdc (input between Y [+] and M [-])	Current Input Signal 4-20mA (input between Y [+] and M [-]). In this case DIP no. 4 must be set to ON.
7	Automatic calibration: the actuator update the stroke range if an unexpected mechanical stop is detected for at least 10 s.	Manual calibration: the actuator calibration is started moving the DIP from OFF to ON or vice versa. With DIP in ON in case of extra stroke or if an unexpected endpoint is detected, the actuator will never update the stroke

## MVE2xx – globe valves actuators

### MODULATING / 3-POINT CONTROL

#### DIAGNOSTIC - ALARM FUNCTIONS

No.	LED behaviour	Error	When	Actuator behaviour		Typical trouble shooting condition	Solution
				<b>Automatic calibration (DIP N. 7 OFF)</b>	<b>Manual calibration (DIP N. 7 ON)</b>		
1	RED on.	Valve stroke less than 5mm	Calibration/first installation	The actuator pushes/pulls 2 times (unexpected stall) trying to remove the possible obstacle. After 2 tries an alarm is signalled and the actuator moves to initial position and does not respond to control signal. Stroke value is not updated because out of range.	The actuator pushes/pulls 2 times against endpoint during calibration and the actuator moves to the initial position and then it does not respond to the control signal. The actuator keeps the previous stroke	Valve with a stroke length lower than 5mm.	Remove power and power up again
2	RED quick blinking + GREEN on	Stroke longer than 60mm	Calibration/first installation	The actuator exits the 60mm stroke range and it moves toward the new stroke limit signaling an anomaly. The actuator pushes/ pulls 2 times against the new stroke limit, then it goes back to the initial position still signalling the anomaly until it is not within 60mm. The actuator does not calibrate the stroke after 10s (wrong range)	The actuator exits the 60mm stroke range and it moves toward the new stroke limit signalling an anomaly. The actuator pushes/ pulls 2 times against the new stroke limit, then it goes back to the initial position still signalling the anomaly until it is not within 60mm. The actuator does not calibrate the stroke after 10s (wrong range)	Valve with a stroke length longer than 60mm	Remove power and power up again
3	RED quick blinking	Unexpected stall within the calibrated stroke range	Normalna praca	The actuator tries 5 times against the new stall condition and then after 10s the actuator updates the new stroke length	The actuator tries 5 times against the new stall condition. At the end of the attempts the fault will be signalled. The actuator does not update the new stroke length, but after 60s makes other attempts to verify the stall condition	Valve stuck	Inverted control signal
4	RED quick blinking	Stroke longer than expected	Normal operation	The actuator moves toward the new stall condition with a lower speed; after 10s the actuator updates the new stroke value	The actuator moves toward the new stall condition with a lower speed; after 10s the actuator does not update the new stroke value	Stem connection loose or valve damaged	Inverted control signal
5	RED slow Blinking	Low Power Voltage	Normal operation	The actuator is still working but performance cannot be guaranteed	The actuator is still working but performance cannot be guaranteed	1. Wrong transformer size 2. Unstable power supply voltage	Correct power supply voltage
6	RED slow blinking	Power supply voltage to high	Normal operation	The actuator is still working but performance cannot be guaranteed	The actuator is still working but performance cannot be guaranteed	1. Wrong transformer size 2. Unstable power supply voltage	Correct power supply voltage


#### STANDARD LEDs BEHAVIOUR

No.	LED	ACTUATOR STATUS
1	GREEN on	The actuator arrived at the extreme point of the stroke read
2	GREEN blinking	The actuator arrived at the intermediate point of the stroke read
3	RED GREEN blinking	The actuator is reading the stroke or it is going to initial position
4	RED & GREEN on	Manual control ON, the actuators ignores the control signal. NOTE! The electronic board is electrically supplied.

## MVE2xx – globe valves actuators

### MODULATING / 3-POINT CONTROL

#### DIMENSIONS [mm]

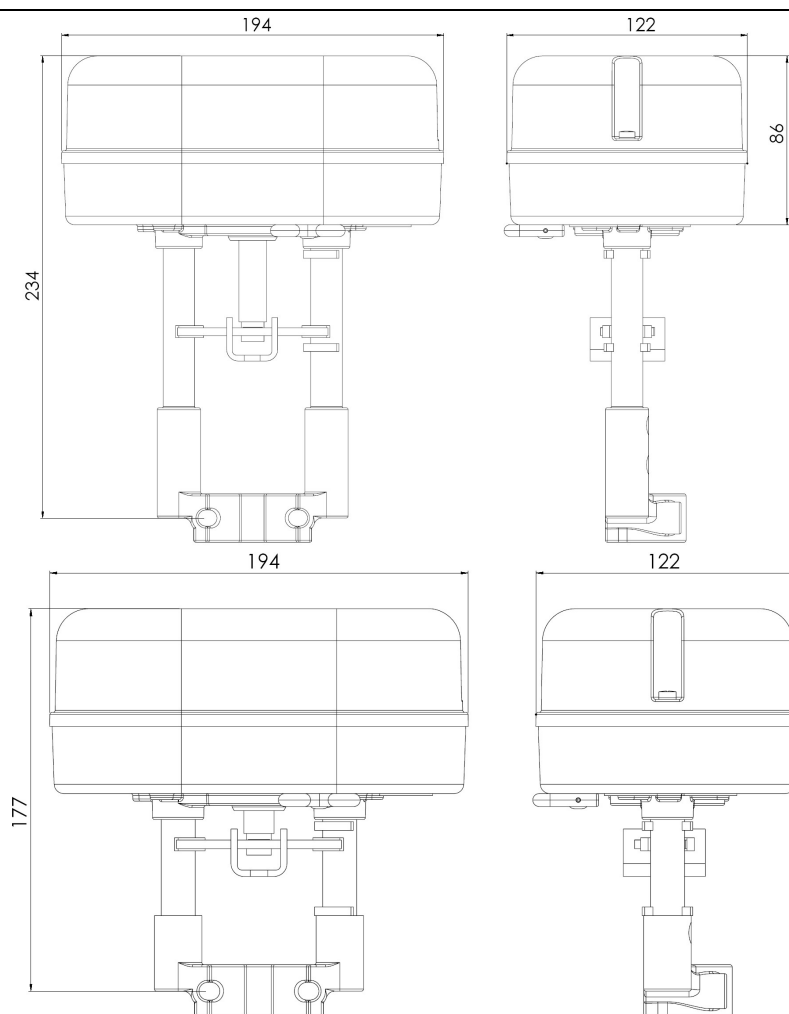

Due to continuous product improvement, specifications are subject to change without notice.

#### Nenutec Polska

00-236 Warszawa  
ul. Świętojerska 5/7  
tel.: +48-(0)-504-050225  
nenutec@nenutec.pl